



Modelo testado
CHERY OMODA5 1.6T, LHD

Peso em ordem de marcha
1423 kg

Aula
SUV pequeno

Rating applies to
all OMODA5

Publication
December 2022



VERDICT

The passenger compartment of the CHERY OMODA5 remained stable in the frontal offset test. Dummy readings indicated good protection of the knees and femurs of both the driver and passenger. However, CHERY were unable to demonstrate that a similar level of protection would be provided to occupants of different sizes or those sitting in different positions, and protection of this body area was rated as marginal. Analysis of the deceleration of the impact trolley during the test, and analysis of the deformable barrier after the test, revealed that the car would be a benign impact partner in a frontal collision. In the full-width rigid barrier test, protection of all critical body areas was good or adequate, for the small female dummies used both in the driver's seat and in the rear passenger position. In the side barrier test, dummy readings indicated good protection of all critical body areas. However, the curtain airbag did not deploy as intended and penalty was applied to the score for the head. In the more severe side pole impact, dummy readings of rib compression indicated marginal protection of that part of the body. Control of excursion (the extent to which a body is thrown to the other side of the vehicle when it is

hit from the far side) was adequate. The OMODA5 has a counter-measure to mitigate against occupant to occupant injuries in such impacts. The system performed well in Euro NCAP's tests, with good protection of the occupants' heads. Tests on the front seats and head restraints demonstrated good protection against whiplash injuries in the event of a rear-end collision. A geometric analysis of the rear seats also indicated good whiplash protection. The CHERY OMODA5 has an advanced eCall system which alerts the emergency services in the event of a crash and the 'MCB' system applies the brakes to prevent secondary collisions. In both the frontal offset and side barrier tests, protection of all critical body areas was good or adequate for both child dummies. The front passenger airbag can be disabled to allow a rearward-facing child restraint to be used in that seating position. Clear information is provided to the driver regarding the status of the airbag and the system was rewarded. All of the child restraint types for which the CHERY OMODA5 is designed could be properly installed and accommodated in the car.

Protection of the head was predominantly good or adequate, with some poor results recorded on the stiff windscreen pillars and at the base of the windscreen. The bumper offered good protection to pedestrians' legs but protection of the pelvis was mostly poor. The autonomous emergency braking (AEB) system of the CHERY can respond to vulnerable road users as well as to other vehicles. The system performed well in tests of its response to pedestrians and in tests of its response to cyclists, with collisions avoided in most cases. The autonomous emergency braking (AEB) system of the CHERY OMODA5 performed well in tests of its reaction to other vehicles. A seatbelt reminder system is fitted as standard to the front and rear seats and the car is equipped with a system to detect driver fatigue. The lane support system gently corrects the vehicle's path if it is drifting out of lane, and also intervenes in some more critical situations. The speed assistance system uses a camera and digital mapping to determine the local speed limit. This information is provided to the driver, who can choose to let the car adapt the limiter as appropriate.



Adult Occupant

87%

Details



Child Occupant

87%

Details



Vulnerable Road Users

68%

Details



Safety Assist

88%

Details

Good

Adequate

Marginal

Weak

Poor

Frontal impact

13 / 16 Pts

Mobile Progressive Deformable Barrier	Full Width Rigid Barrier
	

Lateral impact

14.7 / 16 Pts

Side Mobile Barrier	Side Pole
	
Far-Side Excursion	Occupant Interaction
	

Rear impact

3.7 / 4 Pts

Rear Seat	Front Seat
	

<https://www.euroncap.com/assessments/chery/omoda5/0998/>

2/11

Rescue and Extrication

2 / 2 Pts

Rescue Sheet	Available, ISO compliant 
Advanced eCall	Available
Multi-collision brake	Available



Adult Occupant

87%

Details



Child Occupant

87%

Details



Vulnerable Road Users

68%

Details



Safety Assist

88%

Details



Crash Test Performance based on 6 & 10 year old children

23.7 / 24 Pts

Frontal Impact - 15.7 Pts



Restraint for 6 year old child: Britax Römer KidFix2 S
Restraint for 10 year old child: Britax Römer KidFix2 S

Lateral Impact - 8 Pts



Restraint for 6 year old child: Britax Römer KidFix2 S
Restraint for 10 year old child: Britax Römer KidFix2 S

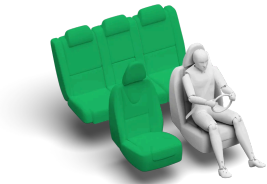
Safety Features

7 / 13 Pts

Equipment	Front passenger	Row 2 outboard	Row 2 center	Row 3 outboard
Isofix	×	✓	×	—
i-Size	×	✓	×	—
Integrated CRS	×	×	×	—

Child seat installation check

12 / 12 Pts

i-Size	Isofix
	
Seatbelt Attached	Legend
	● Easy ● Difficult ● Safety critical ✗ Not allowed ⊘ Airbag ON A rearward-facing child restraint should never be installed in the front passenger seat when the airbag is enabled



Adult Occupant

87%

Details



Child Occupant

87%

Details



Vulnerable Road Users

68%

Details



Safety Assist

88%

Details

Good

Adequate

Marginal

Weak

Poor

VRU Impact Protection

22.7 / 36 Pts



Pedestrian & Cyclist Head	15.3 Pts
Pelvis	1.4 Pts
Knee & Tibia	6 Pts

VRU Impact Mitigation		14.2 / 18 Pts	
System Name	Automatic Emergency Braking System		
Type	Auto-Brake with Forward Collision Warning		
Operational From	4 km/h		
AEB Pedestrian		7.3 / 9 Pts	
Scenario	Day time	Night time	
Car reversing into adult or child		—	
Adult crossing a road into which a car is turning		—	
Adult crossing the road			
Child running from behind parked vehicles		—	
Adult along the roadside			
AEB Cyclist		6.9 / 9 Pts	
Scenario	Day time		
Approaching cyclist crossing from behind parked vehicles			
Approaching a crossing cyclist			
Approaching a cyclist along the roadside			



Adult Occupant

87%

Details



Child Occupant

87%

Details



Vulnerable Road Users

68%

Details



Safety Assist

88%

Details

Good

Adequate

Marginal

Weak

Poor

Speed Assistance 2.3 / 3 Pts	
System Name	Speed limit recognition
Speed Limit Info Function	Camera and Map
Speed Control Function	System advised (accurate to 5km/h)

Occupant Status Monitoring 3 / 3 Pts			
Seatbelt Reminder 2 / 2 Pts			
Warning	Driver Seat	Front Passenger(s)	Rear Passenger(s)
Visual	✓	✓	✓
Audible	✓	✓	✓
Occupant Detection	–	✓	✓
Driver Monitoring 1 / 1 Pts			
System Name	Driver Monitoring System		
Type	Direct eye monitoring		
Operational From	10 km/h		

Lane Support ■ 3.8 / 4 Pts	
System Name	LDW/LDP/ELK
System Type	LKA and ELK
Min Speed (Operational From)	60 km/h
Performance	
Emergency Lane Keeping	■
Lane Keep Assist	■
Human Machine Interface	■

AEB Car-to-Car ■ 5.2 / 6 Pts		
System Name	Automatic emergency braking system	
Type	Autonomous emergency braking and forward collision warning	
Operational From	4 km/h	
Sensor Used	Camera and radar	
Scenario	Autobrake function only	Driver reacts to warning
Turning across the path of an oncoming car	—	—
Approaching a stationary car	■	—
Approaching a slower moving car	■	—
Approaching a braking car	■	—

Equipamentos de segurança

Proteção contra colisões frontais			
	Driver	Passenger	Rear
Front Airbag	✓	✓	—
Belt Pretensioner	✓	✓	✓
Belt Loadlimiter	✓	✓	✓
Knee Airbag	×	×	—

Proteção contra colisões laterais

	Driver	Passenger	Rear
Side Head Airbag	✓	✓	✓
Side Chest Airbag	✓	✓	✗
Side Pelvis Airbag	✓	✓	✗
Centre Airbag	✓	✓	–

Proteção infantil

	Passenger	Rear
Isofix	✗	✓
i-Size	✗	✓
Integrated Child Seat	✗	✗
Airbag Cut-Off Switch	✓	–
Child Presence Detection	–	–

Assistência de segurança

	Driver	Passenger	Rear
Seatbelt Reminder	✓	✓	✓

Outros sistemas de segurança

Active bonnet	✗
AEB vulnerable road users	✓
AEB pedestrian - reverse	✓
Cyclist dooring prevention	–
AEB motorcyclist	–
AEB car-to-car	✓
Speed assistance	✓
Lane assist system	✓
Fatigue detection	–
Distraction detection	✓

Nota: outros equipamentos podem estar disponíveis no veículo, mas não foram considerados no ano de teste.

✓ Equipado de série no veículo ○ Instalado no veículo como parte do pacote de segurança.
○ Não estava instalado no veículo de teste, mas está disponível como opcional ou como parte do pacote de segurança. ✗ Não disponível – Não aplicável

Validade da classificação

Revisões e renovações anuais

Date	Event	Outcome	
2022-12-07	Rating Published	2022 ★★★★★	✓
2023-10-15	Annual Review	2022 ★★★★★	✓
2024-11-13	Variant added	2022 ★★★★★	✓

Variantes da gama de modelos

Body type	Variant description	Drivetrain	Rating applies LHD	Rating applies RHD
-----------	---------------------	------------	--------------------	--------------------

* Tested variant